

Leisure Line Stove Company

Instructions for keeping glass clean in top door

1. Once the glass has been etched and is cloudy it cannot be cleaned, but should be kept in a dry place when the stove is not in use. The fly ash causes this condition and it can be prevented by weekly or bi-weekly cleaning and application of 100% pure silicone spray as outlined in this procedure.
2. A door cover will be required for compliance with these instructions, this part is standard with the Pioneer, Hearth and All American Heater stoves and can be purchased here:
<https://leisurelinestove.com/product/door-cover-spring-handle-comes-standard-w-pioneer-hearth/>
3. After installation of a new top door glass apply silicone to interior surface of glass and rub thoroughly with paper towel to ensure an even, clear coating.
4. Silicone can be purchased here:
<https://leisurelinestove.com/product/silicone-spray-for-glass/>
5. Once every week or two open the top door, place the door cover over the opening.
6. Allow the door to cool so that it can be touched without discomfort
7. While the door is still warm use a clean, damp paper towel to thoroughly clean the interior surface of the glass.
8. Re-Apply the silicone spray to the interior surface of the glass as described in step 3. Above.

CAUTION! The door cover will be very hot after being on the stove, use appropriate heat insulated gloves to handle it.

9. Carefully remove the door cover and set it carefully on a non-combustible surface to cool.
10. Close the stove top door